TYA664BN

4 channel dimmer with output combination 600W

Safety instructions

Electrical equipment may only be installed and assembled by a qualified electrician in accordance with the relevant installation standards, guidelines, regulations, directives, safety and accident prevention regulations of the country.

Failure to comply with these instructions may result in damage to the device, fire or other hazards.

Hazard due to electric shock. Disconnect before working on the device or replacing luminaires. Take into account all circuit breakers that supply dangerous voltages to the device.

Hazard due to electric shock. The device is not suited for safe disconnection of the mains supply. Even when the device is switched off, the load is not galvanically separated from the mains supply.

Do not connect any LED or compact fluorescent lamps that are not expressly suitable for dimming. The device can be damaged.

Do not connect lights with integrated dimmer.

Do not connect capacitive load and inductive loads together on the same output.

The permissible maximum load per device must not be exceeded.

Making output combination using different phases will definitively damage the product. Output combinations cannot be done if the phases used on L1, L2, L3 and L4 are different.

These instructions are an integral component of the product and must be retained by the end

Design and layout of the device

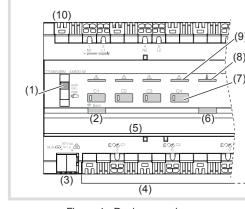


Figure 1 : Device overview Slide switch auto/min/max/ (min/max) slide switch settings are unavailable by default

on TYA664BN., it must be activated in ETS)

- (2) Illuminated button for dimming mode (3) KNX bus connection terminal
- (4) Connection of load
- (5) Labelling field with cover (6) Illuminated programming button
- (7) Operation button for manual operation with status LED
- (8) Control LED overheating protection
- (9) Control LED short-circuit and overload protection per output
- (10) Mains connection

Function

System information

This device is a product of the KNX system and corresponds to the KNX guidelines. Detailed specialised knowledge obtained from KNX training

is required for understanding. The planning, installation and commissioning of the device is carried out with the help of KNX-certified software.

svstem link commissionina

The function of the device is software-dependent. The software is to be taken from the product database. You can find the latest version of the product database, technical descriptions as well as conversion and additional support programmes

Functional description

The device has four load outputs that can be connected to different phases. It works with automatic load detection depending on the connected load in the phase cut-on or phase cut-off and enables switching and dimming via the KNX bus of:

- Incandescent lamps and halogen lamps
- Low-voltage halogen lamps with conventional or electronic transformer
- dimmable LED and energy-saving lamps

Additionally, the device has a learn function for more efficient control of energy-saving lamps and 230 V LED lamps.

Output combination

The 4 channels can be combined together with different allowed combinations in order to dim more powerful loads.

Before an ETS download the device will automatically run a test to recognize if the cabling made matches with one of the authorized combinations, after an ETS download the device will automatically run a test to recognize if the cabling made

matches with the "output combination" parameter filled in FTS.

Authorized combinations:

(1)-(2)-(3)-(4)(1+2)-(3)-(4)(1+2+3)-(4)(1+2+3+4)(1)-(2)-(3+4)(1+2)-(3+4)

If another not-allowed output combination is detected the product will indicate with the red leds on the buttons which output group is not allowed/

- Dimming of electric loads ∼ 230 V Installation on DIN rail according to DIN EN
- 60715 in distribution box

Product characteristics

- Status display of the output on the device
- Manual activation of the output on the device possible, building site operation Automatic load detection
- Setting the minimum and maximum dimming
- Timer functions
 - Scene function
 - Forced position by higher-level controller
 - Combination of the outputs to dim more power

Short-circuit and overload protection

Short-circuit and overload are signalled via the control LED (9). The load is throttled (see Trouble-

Overheating protection

Overheating of the device is signalled by a permanent light of the control LED (8). The connected load is throttled (see Troubleshooting).

Operation

Manual operation

Bus and mains power supply are present.

 Push switch (1) to position Manual operation is switched on, the output can

be controlled using the operation button (7). During manual operation, the controller is deac-

tivated via the KNX bus.

system link commissioning: Depending on the programming, the manual operation is activated permanently or for a time period configured via the application software. If the manual operation is disabled via the application software, no activation takes place.

Move switch (1) to position auto.

The manual operation is switched off. Operation takes place solely via the KNX bus. The output adopts the brightness predefined by the

Operating output in manual operation

Operation takes place by a short or long press on the operation button (7) (table 1).

If the integrated LED flashes when pressing the poperation button, no load is connected.


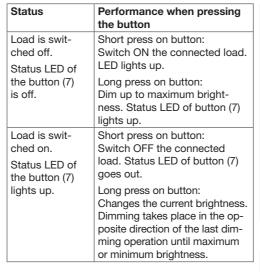


Table 1: Manual operation

Disconnect the connecting cables before working on the device and cover all live parts in the area!

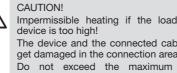

cooling.

DIN EN 60715.

Connect device

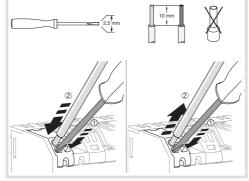
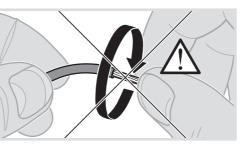


Fig 2: Installation/removal with plug-in terminals



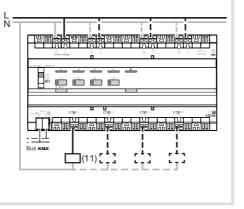


Figure 3: Device connection 1-phase

Information for electricians Installation and electrical connection


shock!


Touching live parts can result in an electric An electric shock can be lethal!


Impermissible heating if the load of the The device and the connected cables may get damaged in the connection area! Do not exceed the maximum current carrying capacity!

Observe temperature range. Provide sufficient

Mount device onto DIN rail in accordance with

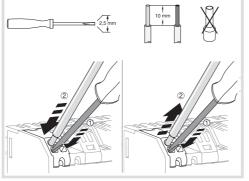

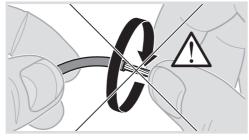

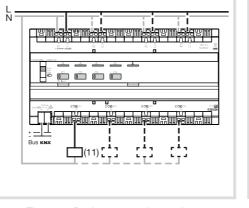

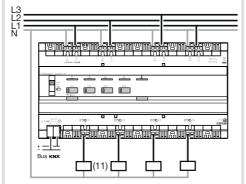


Figure 4: Device connection multi-phase

(11) Load

- Connect bus cable via connecting terminal (3).
- Connect load (11) on the lower terminal strip (4) of the device.
- To ensure proper functioning of the device the terminal blocks N1 and L1 have to be wired with mains power. If mains is missing on L1 the product will be totally blocked.

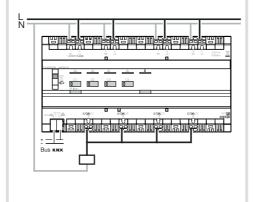


Figure 5 : Output combination (1+2+3+4)

Figure 6 : Output combination (1+2)-(3+4)

Start-up

system link: Loading physical address and application software

The switch for manual operation (1) is in position

- Switch on mains voltage.
- Switch on bus voltage
- Press programming button (5). The button lights up.
- If the button does not light up, no bus voltage is present. Load the physical address into the device.
- Status LED of the button goes out. Load application software

status LFD of the operation button (7).

 Note down the physical address on the labelling field (5).

Start up the device. Switch on mains supply.

The functionality of the outputs is displayed via the

LED status Meaning of the signal LED lights up Load is activated permanently LED flashes No load connected

Setting minimum and maximum dimming value on the device

The device is ready for operation. Setting brightness value

- The brightness value can be set by manual poperation on the device or by the programmed dimming button of an operating unit.
- Set switch (1) to max. in order to apply the set brightness as maximum dimming value.
- Set switch (1) to min. in order to apply the set brightness as minimum dimming value. Keep the operation button (7) pressed for more

The status LED flashes twice. The set brightness value is saved.

If the minimum or maximum dimming value are outside the setting range, the status LED (7) flashes permanently after the save operation.

Setting dimming mode on the device

than 3 s.

In the factory setting, the device performs an automatic load detection for ohmic, inductive and capacitive loads and selects the suitable dimming performance. If the load type is known, this can

be specified on the device without performing an The device is ready for operation. The dimming automatic load detection button of an operating unit has been programmed with the taught-in output.

The device is ready for operation.

button (7).

and LED lamps is optimised.

with the taught-in output.

• Press button once briefly.

in process.

Select the channel for which you wish to

change the dimmer mode by pressing on

• Briefly press the dimming mode button (2) repeat-

displays the desired operating mode (Table 2).

selected operating mode is set. After that, the

operating mode is displayed for approx. 3 s

the button, the device will revert to its previous

Teach in the load of an operating unit via the

When teaching in the connected load, the dim-

The device is ready for operation. The dimming

button of an operating unit has been programmed

• Press the dimming button 5 times briefly, then

The short press is independent of the config-

ured operating performance on the operating

The teach-in procedure lasts approx. 30 s. To

operation is performed. After teaching in, the

connected load lights up at maximum bright-

Depending on the connected load, the mini-

Resetting taught-in loads in the device

tion, e.g. after replacing luminaires.

mum brightness may change due to the teach-

The device can be reset to automatic load detec-

Automatic load detection is particularly suitable

I for loads that can be dimmed clearly in the phase

cut-on or phase cut-off ("conventional loads").

ness and flashes once. The teach-in process is

optimise the dimming performance, a dimming

unit (5 x On, 5 x Off or 5 x On/Off)

keep the button pressed until the load switches

ming performance for compact fluorescent lamps

While the button is flashing quickly, the

before the button goes out.

dimming mode after 2 minutes.

- Press the dimming button 5 times briefly, then Keep the dimming mode button (2) pressed until keep the button pressed until the load switches the status LED of the operation button (7) flashes.
 - The short press is independent of the configured operating performance on the operating
 - unit (5 x On, 5 x Off or 5 x On/Off). If the dimming button is no longer pressed
- edly until the coloured lighting of the button (2) within the next 10 seconds, the learned dimming principle is retained. • Keep the dimming mode button (2) pressed until the lighting of the button (2) flashes quickly.
 - Press button 2 times briefly The load flashes twice. The automatic load detection is enabled again.

Appendix

If the setting is not confirmed by holding down Technical data supply voltage

via mains	240 V \sim . +/-6%	
e Supply voltage KNX/EIB	== 21 32 V SELV	
Current consumption KNX/EII Consumption without load Fan-in	B 2.4 mA 780 mW 1	
Product consumption	1W max	
Product power dissipation	2,4W max	
Operating altitude	2000 m. max	
Pollution degree	2	
Surge voltage	4 kV	
Degree of protection of housing	•	
	Current consumption KNX/EIB Current consumption KNX/EII Consumption without load Fan-in Product consumption Product power dissipation Operating altitude Pollution degree Surge voltage	

The load for the selected dimming mode is only taught in for approx. 30 s. This can lead to temporary impairment of the lighting.		IP30
	IK (impact protection)	04
	Overvoltage class	III
Table 2	Dimension	10 modules, 10 x 17.5 mm
Displaying dimming mode	Connection capacity	0.75 mm ² 2.5 mm ²
 Briefly press the dimming mode button (2). 	Operating temperature	-5+ 45°C
The coloured lighting of the button will display the current operating mode for approx. 3 s (Table 2).	Storage temperature	- 20+ 70°C
	Upstream circuit breake	er 10 A up to 2300W

Load that can be connected per output

Output Combination	- 230 V~ incandescent lamps, halogen lamps - 12 V~ / 24 V~ halogen lamps with conventional transformer - 12 V~ / 24 V~ halogen lamps with electronic transformer - 12 V~ / 24 V~ energy-saving lamps (CFL)/LED lamps with dimmable driver	
	Min	Max
1 output independent channel	5W (1 driver)	600W (10 drivers)
2 outputs combined in 1 channel	300W (5 drivers)	1200W (16 drivers)
3 outputs combined in 1 channel	600W (8 drivers)	1800W (22 drivers)
4 outputs combined in 1 channel	900W (11 drivers)	2400W (28 drivers)

16 A between 2300W and 2400W

•	ing lamps (CFL)/ LED lamps	
	Min	Max
1 output independent channel	5W (1 lamp)	120W (10 lamps)
2 outputs combined in	40W	240W

Output Combination - Dimmable 230V~ energy-sav-

	channel	(1 lamp)	(10 lam
	2 outputs combined in 1 channel	40W (5 lamps)	240W (16 lam
	3 outputs combined in 1 channel	80W (8 lamps)	360W (22 lam
	4 outputs combined in 1 channel	120W (11 lamps)	480W (28 lam

*Driver limitations need to be respected only for energy

Conventional or electronic transformers should not be operated with less than 75% of their nominal load.

Troubleshooting

Manual operation not possible

Cause 1 : Switch (1) not moved to .

Move switch to Cause 2: Manual operation has not been enabled

(system link) Enable manual operation via application soft-

Connected loads do not light up

Cause 1 : Electronic short-circuit and overload protection has triggered, control LED (9) lights up/

Reduce connected load, check wiring and 230 V \sim , + 10%/-15 % repair if necessary.

> Cause 2: Overheating protection has triggered, control LED (8) lights up. Reduce connected load, provide sufficient

cooling, increase distance to adjacent devices. Cause 3: Phase L1 is missing, phase L1 presence is necessary for any output to work

Cause 4: The phase (L1, L2, L3, L4) of the respec-

tive output (Output 1, 2, 3 or 4) is missing Cause 5: Before an ETS download, the cabled output combination doesn't correspond to an authorized output combination

Cause 6: After an ETS download, the output combination doesn't correspond to the output 30 combination parameter set in ETS

04 Bus operation is not possible

up permanently

Cause 1 : Bus voltage is not present. Check bus connection terminals for correct

Check bus voltage by briefly pressing the programming button (6), red LED lights up if bus voltage is present. If mains voltage is present without bus voltage, the red LED is lit

Cause 2: Manual operation is active. Switch (1) is in position 🐑.

Move switch (1) to position auto.



(Waste Electrical & Electronic Equipment). (Applicable in the European Union and other European countries with separate collection systems).

Correct Disposal of This product

This marking shown on the product or its literature indicates that it should not be disposed with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal. please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe Business users should contact their supplier and

check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal.

Usable in all Europe () and in Switzerland

6LE002798A